

## DLT KIT LISTING

PUMP	PSI	TOOL KIT P/N	SIZE'S	REMARKS	STD
NO PUMP	3000 PSI	DLT05PSKT3000	-4		STD
NO PUMP	3000 PSI	DLT05PSKT3001	-3		STD
NO PUMP	3000 PSI	DLT05PSKT3002	-3, & -4		STD
NO PUMP	3000 PSI	DLT05PSKT3003	-4	NO CUTTER ASSY, DEBURRING TOOLS, HEX KEY	STD
NO PUMP	3000 PSI	DLT10PSKT3000	-6		STD
NO PUMP	3000 PSI	DLT10PSKT3001	-5		STD
NO PUMP	3000 PSI	DLT10PSKT3002	-5, & -6		STD
NO PUMP	3000 PSI	DLT10PSKT3003	-6	NO CUTTER ASSY, DEBURRING TOOLS, HEX KEY	STD
NO PUMP	3000 PSI	DLT10PSKT3004	-6	Only HA, PU, & Insp Gage, No Box Assy	STD
NO PUMP	3000 PSI	DLT20PSKT3000	-8, & -10		STD
NO PUMP	3000 PSI	DLT20PSKT3002	-8		STD
NO PUMP	3000 PSI	DLT20PSKT3003	-8	NO CUTTER ASSY, DEBURRING TOOLS, HEX KEY	STD
NO PUMP	3000 PSI	DLT20PSKT3004	-10		STD
NO PUMP	3000 PSI	DLT20PSKT3005	-10	NO CUTTER ASSY, DEBURRING TOOLS, HEX KEY	STD
NO PUMP	3000 PSI	DLT20PSKT3006	-08	Only HA, PU, & Insp Gage, No Box Assy	STD
NO PUMP	3000 PSI	DLT20PSKT3008	-10	Only HA, PU, & Insp Gage, No Box Assy	STD
NO PUMP	3000 PSI	DLT30PSKT3000	-12		STD
NO PUMP	3000 PSI	DLT30PSKT3001	-12	NO CUTTER ASSY, DEBURRING TOOLS, HEX KEY	STD
NO PUMP	3000 PSI	DLT30PSKT3002	-12	Only HA, PU, & Insp Gage, No Box Assy	STD
NO PUMP	3000 PSI	DLT30PSKT3010	-8, & -12	Obsolete: p/n should be DLT30MAPSKT3010	STD
NO PUMP	3000 PSI	DLT30MAPSKT3000	-4, -5, -6, -8, & -10		STD
NO PUMP	3000 PSI	DLT30MAPSKT3001	-4, -6, -8, -10, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3002	-4, -5, -6, -8, -10, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3003	-4, -6, & -8		STD
NO PUMP	3000 PSI	DLT30MAPSKT3004	-3, -4, -5, -6, -8, -10, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3005	-4, -6, -8, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3006	-4, & -6		STD
NO PUMP	3000 PSI	DLT30MAPSKT3007	-3, -4, -6, -8, -10, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3008	-4, -5, & -6		STD
NO PUMP	3000 PSI	DLT30MAPSKT3009	-8, -10, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3010	-8, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3011	-3, -4, -5, & -6		STD
NO PUMP	3000 PSI	DLT30MAPSKT3012	-3, -4, -5, -8, -10, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3013	-6, -8, & -10		STD
NO PUMP	3000 PSI	DLT30MAPSKT3014	-4, -5, -6, & -10		STD
NO PUMP	3000 PSI	DLT30MAPSKT3015	-4, -5, -6, & -8		STD
NO PUMP	3000 PSI	DLT30MAPSKT3016	-6, -8, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3017	-4, -6, -8, & -10		STD
NO PUMP	3000 PSI	DLT30MAPSKT3018	-4, -6, -10, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3019	-6, & -8		STD
NO PUMP	3000 PSI	DLT30MAPSKT3020	-4, -6, & -12		STD
NO PUMP	3000 PSI	DLT30MAPSKT3021	-10, & -12		STD
NO PUMP	3000 PSI	DLT40PSKT3000	-16, -20, & -24		STD
NO PUMP	3000 PSI	DLT40PSKT3002	-16		STD
NO PUMP	3000 PSI	DLT40PSKT3003	-20		STD
NO PUMP	3000 PSI	DLT40PSKT3004	-24		STD
NO PUMP	3000 PSI	DLT40PSKT3005	-16, & -24		STD
NO PUMP	3000 PSI	DLT40PSKT3006	-20, & -24		STD
NO PUMP	3000 PSI	DLT40PSKT3007	-16, & -20		STD
NO PUMP	3000 PSI	DLT40PSKT3008	-16	NO CUTTER ASSY, DEBURRING TOOLS, HEX KEY	STD
NO PUMP	3000 PSI	DLT40PSKT3009	-20	NO CUTTER ASSY, DEBURRING TOOLS, HEX KEY	STD
NO PUMP	3000 PSI	DLT40PSKT3010		P/N and Drawing is cancelled	STD
NO PUMP	3000 PSI	DLT40PSKT3012	-20	Only HA, PU, & Insp Gage, No Box Assy	STD
NO PUMP	3000 PSI	DLT40MAPSKT3000	-4, -6, -8, -10, -12, -16, -20, & -24		STD
NO PUMP	3000 PSI	DLT40MAPSKT3001	-4, -6, -8, -10, -12, -16, & -20		STD
NO PUMP	3000 PSI	DLT40MAPSKT3002	-4, -5, -6, -8, -10, -12, -16, -20, & -24		STD
NO PUMP	3000 PSI	DLT40MAPSKT3003	-4, -5, -6, -8, -10, -12, & -16		STD
NO PUMP	3000 PSI	DLT40MAPSKT3004	-4, -6, -8, -10, -12, & -16		STD
NO PUMP	3000 PSI	DLT40MAPSKT3005	-3, -4, -5, -6, -8, -10, -12, -16, -20, & -24		STD
NO PUMP	3000 PSI	DLT40MAPSKT3006	-3, -4, -5, -8, -10, -12, -16, -20, & -24		STD
NO PUMP	3000 PSI	DLT40MAPSKT3007	-3, -4, -6, -8, -10, -12, & -16		STD
NO PUMP	3000 PSI	DLT40MAPSKT3008	-10, -12, & -16		STD
NO PUMP	3000 PSI	DLT40MAPSKT3009		OBSOLETE : SEE DLT30MAPSKT3009	STD
NO PUMP	3000 PSI	DLT40MAPSKT3010	-8, -10, -12, -16, -20, & -24		STD
NO PUMP	3000 PSI	DLT40MAPSKT3011	-4, -5, -6, -8, -10, -12, -16, & -20		STD
NO PUMP	3000 PSI	DLT40MAPSKT3012	-12, & -16		STD
NO PUMP	3000 PSI	DLT40MAPSKT3013	AVAILABLE		STD
NO PUMP	3000 PSI	DLT40MAPSKT3014	AVAILABLE		STD
NO PUMP	3000 PSI	DLT40MAPSKT3015	-4, -6, -8, & -16		STD
NO PUMP	3000 PSI	DLT40MAPSKT3016	-3, -4, -5, -6, -8, -10, & -16		STD
NO PUMP	3000 PSI	DLT40MAPSKT3017	-3, -4, -5, -6, -8, -10, -12, & -16		STD
NO PUMP	3000 PSI	DLT40MAPSKT3018	-4, -5, -6, -8, -10, -16, -20, & -24		STD
NO PUMP	3000 PSI	DLT40MAPSKT3019	-3, -4, -5, -6, -8, -10, -12, -16, & -20		STD
NO PUMP	3000 PSI	DLT40MAPSKT3020	-8, -10, -12, & -16		STD
NO PUMP	3000 PSI	DLT40MAPSKT3021	-4, -6, -8, -10, -12, -16, & -24		STD
NO PUMP	3000 PSI	DLT40MAPSKT3022	-4, -8, -10, -12, -16, -20, & -24		STD
NO PUMP	3000 PSI	DLT40MAPSKT3023	-5, -6, -8, -10, -12, -16, & -24		STD
NO PUMP	3000 PSI	DLT40MAPSKT3024	-3, -4, -6, -8, -10, -12, -16, & -24		STD

## DLT KIT LISTING

PUMP	PSI	TOOL KIT P/N	SIZE'S	REMARKS	STD
NO PUMP	3000 PSI	DLT40MAPSKT3025	-4, -6, -8, -12, & -16		STD
NO PUMP	3000 PSI	DLT05PSKT3100	-4		SOFT ANNEAL
NO PUMP	3000 PSI	DLT05PSKT3101	-3		SOFT ANNEAL
NO PUMP	3000 PSI	DLT05PSKT3102	-3, & -4		SOFT ANNEAL
NO PUMP	3000 PSI	DLT10PSKT3100	-6		SOFT ANNEAL
NO PUMP	3000 PSI	DLT10PSKT3101	-5		SOFT ANNEAL
NO PUMP	3000 PSI	DLT10PSKT3102	-5, & -6		SOFT ANNEAL
NO PUMP	3000 PSI	DLT20PSKT3100	-8, & -10		SOFT ANNEAL
NO PUMP	3000 PSI	DLT20PSKT3102	-8		SOFT ANNEAL
NO PUMP	3000 PSI	DLT20PSKT3104	-10		SOFT ANNEAL
NO PUMP	3000 PSI	DLT30PSKT3100	-12		SOFT ANNEAL
NO PUMP	3000 PSI	DLT40PSKT3100	-16, -20, & -24		SOFT ANNEAL
NO PUMP	3000 PSI	DLT40PSKT3102	-16		SOFT ANNEAL
NO PUMP	3000 PSI	DLT40PSKT3103	-20		SOFT ANNEAL
NO PUMP	3000 PSI	DLT40PSKT3104	-24		SOFT ANNEAL
NO PUMP	3000 PSI	DLT40PSKT3105	-16, & -20		SOFT ANNEAL
NO PUMP	3000 PSI	DLT40MAPSKT3100	-4, -6, -8, -10, -12, -16, & -20		SOFT ANNEAL
NO PUMP	3000 PSI	DLT05PMKT3200	-5MM		METRIC, Soft Anneal
NO PUMP	3000 PSI	DLT10PMKT3200	-6MM, -8MM, & -10MM		METRIC, Soft Anneal
NO PUMP	3000 PSI	DLT20PMKT3200	-14MM		METRIC, Soft Anneal
NO PUMP	3000 PSI	DLT20PMKT3201	-12MM, -14MM, -15MM, -16MM	"DOUBLE CHECK SIZE'S COMBINATION"	METRIC, Soft Anneal
NO PUMP	3000 PSI	DLT20PMKT3202	-6MM, -10MM, & -14MM		METRIC, Soft Anneal
NO PUMP	3000 PSI	DLT30PMKT3200	-18MM		METRIC, Soft Anneal
NO PUMP	3000 PSI	<b>TOOL KIT P/N</b>	<b>SIZE'S</b>	<b>REMARKS</b>	
NO PUMP	3000 PSI	DLT10PSKT3300	-6		Boeing Comm'l
NO PUMP	3000 PSI	DLT40PSAK3300		Accessory Kit : HA -16, Insp Gage -16, Marking Tool All sizes	Boeing Comm'l
NO PUMP	3000 PSI	DLT40PSKT3302	-16		Boeing Comm'l
NO PUMP	3000 PSI	DLT40PSKT3303	-16	Only HA, PU, & Insp Gage, No Box Assy	Boeing Comm'l
NO PUMP	3000 PSI	DLT40MAPSKT3300	-4, -6, -8, -10, -12, -16, -20, & -24		Boeing Comm'l
NO PUMP	3000 PSI	DLT40MAPSKT3301	Available		Boeing Comm'l
NO PUMP	3000 PSI	DLT40MAPSKT3302	Available		Boeing Comm'l
NO PUMP	3000 PSI	DLT40MAPSKT3303	-4, -5, -6, -8, -10, -12, & -16		Boeing Comm'l
NO PUMP	3000 PSI	DLT40MAPSKT3304	Available		Boeing Comm'l
NO PUMP	3000 PSI	DLT40MAPSKT3305	-3, -4, -5, -6, -8, -10, -12, -16, -20, & -24		Boeing Comm'l
NO PUMP	4000 PSI/D	DLT10PSKT4000	-6		
NO PUMP	4000 PSI/D	DLT20PSKT4000	-8, & -10		
NO PUMP	4000 PSI/D	DLT20PSKT4002	-8		
NO PUMP	4000 PSI/D	DLT20PSKT4004	-10		
NO PUMP	4000 PSI/D	DLT30PSKT4000	-12		
NO PUMP	4000 PSI/D	DLT30PSKT4001	-12, & -14		
NO PUMP	4000 PSI/D	DLT30PSKT4002	-14		
NO PUMP	4000 PSI/D	DLT30MAPSKT4000	-4, -6, & -8		
NO PUMP	4000 PSI/D	DLT40PSKT4000	-116, -24(STD)		
NO PUMP	4000 PSI/D	DLT40PSKT4002	-116		
NO PUMP	4000 PSI/D	DLT40PSKT4004	-24		
NO PUMP	4000 PSI/D	DLT40PSKT4005	-116, -120, & -24	DLT40PSKT4000 & DLT55PSKT4000	
NO PUMP	4000 PSI/D	DLT40PSKT4006	-116, -20(STD), & -24		
NO PUMP	4000 PSI/D	DLT40PSKT4000	-116, & -24(STD)	NO CUTTER ASSY, DEBURRING TOOLS, HEX KEY	
NO PUMP	4000 PSI/D	DLT40MAPSKT4000	-4, -6, -8, -10, -12, -116, -120, & -24	DLT40MAPSKT4002 & DLT55PSKT4000	
NO PUMP	4000 PSI/D	DLT40MAPSKT4001	-4, -6, -8, -10, & -12		
NO PUMP	4000 PSI/D	DLT40MAPSKT4002	-4, -6, -8, -10, -12, -116, & -24		
NO PUMP	4000 PSI/D	DLT40MAPSKT4003	-4, -5, -6, -8, -10, -12, -116, -120, & -24	DLT40MAPSKT4005 & DLT55PSKT4000	
NO PUMP	4000 PSI/D	DLT40MAPSKT4004	-4, -5, -6, -8, -10, -12, -14, -116, -120, & -24	DLT40MAPSKT4006 & DLT55PSKT4000	
NO PUMP	4000 PSI/D	DLT40MAPSKT4005	-4, -5, -6, -8, -10, -12, -116, & -24		
NO PUMP	4000 PSI/D	DLT40MAPSKT4006	-4, -5, -6, -8, -10, -12, -14, -116, & -24		
NO PUMP	4000 PSI/D	DLT40MAPSKT4007	-06, & -10		
NO PUMP	4000 PSI/D	DLT55PSKT4000	-120		
NO PUMP	4000 PSI/D	DLT55PSKT4000	-120	NO CUTTER ASSY, DEBURRING TOOLS, HEX KEY	
NO PUMP	2000 PSI/D	DLT40PSKT2000	-16, & -20		
NO PUMP	2000 PSI/D	DLT40PSKT2001	-16		
NO PUMP	2000 PSI/D	DLT40PSKT2002	-16, -20, & -24		
With Manu	3000 PSI	DLTFRPSKT3000	-4, -6, -8, -10, -12, -16, -20, & -24	DLTFRPSKT3001 & DLT40PSKT3000	STD
With Manu	3000 PSI	DLTFRPSKT3001	-4, -6, -8, -10, & -12		STD
With Manu	3000 PSI	DLTFRPSKT3002	-4, -6, -8, & -10		STD
With Manu	3000 PSI	DLTFRPSKT3003	-4, & -6		STD
With Manu	3000 PSI	DLTFRPSKT3004	-4, -5, -6, -8, -10, & -12		STD
With Manu	3000 PSI	DLTFRPSKT3005	-8, -10, & -12		STD
With Manu	3000 PSI	DLTFRPSKT3006	-4, -5, & -6		STD
With Manu	3000 PSI	DLTFRPSKT3007	-4, -6, & -8		STD
With Manu	3000 PSI	DLTFRPSKT3008	-3, -4, -5, -6, -8, -10, & -12		STD
With Manu	3000 PSI	DLTFRPSKT3009	-3, -4, -5, -6, -8, -10, -12, -16, -20, & -24	DLT40MAPSKT3005 & DLT05MAPM1000	STD
With Manu	3000 PSI	DLTFRPSKT3010	-3, -4, -5, & -6		STD
With Manu	3000 PSI	DLTFRPSKT3011	-3, -4, -5, -6, -8, & -10		STD
With Manu	3000 PSI	DLTFRPSKT3012	-3, -4, -6, & -8		STD
With Manu	3000 PSI	DLTFRPSKT3013	-4, -5, -6, -8, -10, & -16		STD
With Manu	3000 PSI	DLTFRPSKT3014	-4, -6, -8, -10, -12, & -16	DLT40MAPSKT3004 & DLT05MAPM1000	STD
With Manu	3000 PSI	DLTFRPSKT3015	-4, -5, -6, & -8		STD
With Manu	3000 PSI	DLTFRPSKT3016	-4, -6, -8, & -12		STD

## DLT KIT LISTING

PUMP	PSI	TOOL KIT P/N	SIZE'S	REMARKS	STD
With Manu	3000 PSI	DLTFRPSKT3017	-4, -5, -6, -8, & -10		STD
With Manu	3000 PSI	DLTFRPSKT3018	-4		STD
With Manu	3000 PSI	DLTFRPSKT3019	-8, -10, -12, -16, -20, & -24	DLT40MAPSKT3010 & DLT05MAPM1000	STD
With Manu	3000 PSI	DLTFRPSKT3020	-4, -5, -6, -8, -10, -12, & -16	DLT40MAPSKT3003 & DLT05MAPM1000	STD
With Manu	3000 PSI	DLTFRPSKT3021	-6, -8, -10, -12, -16, & -20	DLTFRPSKT3022 & DLT40PSKT3007	STD
With Manu	3000 PSI	DLTFRPSKT3022	-6, -8, -10, & -12		STD
With Manu	3000 PSI	DLTFRPSKT3023	-8 & -10		STD
With Manu	3000 PSI	DLTFRPSKT3024	-3, -4, -5, -6, -8, -10, -12, & -16	DLT40MAPSKT3017 & DLT05MAPM1000	STD
With Manu	3000 PSI	DLTFRPSKT3025	-6		STD
With Manu	3000 PSI	DLTFRPSKT3026	-3, -4, & -6		STD
With Manu	3000 PSI	DLTFRPSKT3027	-4, -5, -6, -8, -10, -12, -16, & -20	DLT40MAPSKT3011 & DLT05MAPM1000	STD
With Manu	3000 PSI	DLTFRPSKT3028	-4, -5, -6, -8, -10, -12, -16, -20, & -24	DLTFRPSKT3004 & DLT40PSKT3000	STD
With Manu	3000 PSI	DLTFRPSKT3029	-4, -6, -8, -10, -12, & -16	<b>WATERPROOF BOX</b>	STD
With Manu	3000 PSI	DLTFRPSKT3030	-4, -5, -6, -8, -10, -12, -16, & -24	DLTFRPSKT3004 & DLT40PSKT3005	STD
With Manu	3000 PSI	DLTFRPSKT3031	-3, -4, -5, -6, & -8		STD
With Manu	3000 PSI	DLTFRPSKT3032	-3, -4, -5, -6, -8, -10, & -16	DLT40MAPSKT3016 & DLT05MAPM1000	STD
With Manu	3000 PSI	DLTFRPSKT3033	-3, -4, -5, -6, -8, -10, -12, -14, & -16	<b>WATERPROOF BOX</b>	STD
With Manu	3000 PSI	DLTFRPSKT3034	-6, & -8		
With Manu	3000 PSI	DLTFRPSKT3035	-3, & -4		
With Manu	3000 PSI	DLTFRPSKT3036	-4, -5, -6, -8, -10, -20, & -24	DLTFRPSKT3017 & DLT40PSKT3006	
With Manu	3000 PSI	DLTFRPSKT3037	-8		
With Manu	3000 PSI	DLTFRPSKT3038	-3, -4, -6, -8, -10, & -12		
With Manu	3000 PSI	DLTFRPSKT3039	-3, -4, -5, -6, -8, -10, -12, -16, & -20	DLTFRPSKT3008 & DLT40PSKT3007	
With Manu	3000 PSI	DLTFRPSKT3040	-4, -6, -8, -10, -12, -16, & -20	DLTFRPSKT3001 & DLT40PSKT3007	
With Manu	3000 PSI	DLTFRPSKT3041	-4, & -8		
With Manu	3000 PSI	DLTFRPSKT3042	-3, -4, -6, -8, -10, -12, -16, -20, & -24	DLTFRPSKT3038 & DLT40PSKT3000	
With Manu	3000 PSI	DLTFRPSKT3043	-4, -6, -10, -12, & -16		
With Manu	3000 PSI	DLTFRPSKT3044	-6, -8, & -10 (IN STD) ; -12, & -14 (4000 PSI)		
With Manu	3000 PSI	DLTFRPSKT3045	-12		
With Manu	3000 PSI	DLTFRPSKT3046	-6, -8, & -10		
With Manu	3000 PSI	DLTFRPSKT3047	-3, -4, & -8		
With Manu	3000 PSI	DLTFRPSKT3048	-4, & -12		
With Manu	3000 PSI	DLTFRPSKT3049	-4, -5, -6, & -10		
With Manu	3000 PSI	DLTFRPSKT3050	-3, -4, -6, -8, & -10		
With Manu	3000 PSI	DLTFRPSKT3051	-4, -6, -8, & -16		
With Manu	3000 PSI	DLTFRPSKT3052	-4, -8, -10, & -12		
With Manu	3000 PSI	DLTFRPSKT3053	-4, -8, -10, -12, -16, -20, & -24	DLT40MAPSKT3022 & DLT05MAPM1000	
With Manu	3000 PSI	DLTFRPSKT3054	-6, -8, & -12		
With Manu	3000 PSI	DLTFRPSKT3055	-16, -20, & -24		
With Manu	3000 PSI	DLTFRPSKT3056	-4, -5, -6, -8, -12, & -16		
With Manu	3000 PSI	DLTFRPSKT3057	-6, -12, & -16		
With Manu	3000 PSI	DLTFRPSKT3058	-6, -8, -12, & -16		
With Manu	3000 PSI	DLTFRPSKT3059	-6, & -12		
With Manu	3000 PSI	DLTFRPSKT3060	-12, & -16		
With Manu	3000 PSI	DLTFRPSKT3061	-16, & -20		
With Manu	3000 PSI	DLTFRPSKT3062	VACANT		
With Manu	3000 PSI	DLTFRPSKT3063	-4, -6, -8, -10, -12, -16, & -20 ; -5(Soft Annl)	DLTFRPSKT3064 & DLT40PSKT3007	
With Manu	3000 PSI	DLTFRPSKT3064	-4, -6, -8, -10, & -12; -5 (Soft Annl)		
With Manu	3000 PSI	DLTFRPSKT3065	-5, -6, -8, -10, & -12		
With Manu	3000 PSI	DLTFRPSKT3066	-5, -6, -8, -10, -12, -16, & -24	DLT40MAPSKT3023 & DLT05MAPM1000	STD
With Manu	3000 PSI	DLTFRPSKT3067	-4, -6, -8, -10, -12, -16, & -24	DLTFRPSKT3001 & DLT40PSKT3005	STD
With Manu	3000 PSI	DLTFRPSKT3068	-8, -10, -12, & -16	DLT40MAPSKT3020 & DLT05MAPM1000	STD
With Manu	3000 PSI	DLTFRPSKT3069	-3		STD
With Manu	3000 PSI	DLTFRPSKT3070	-8, & -12		STD
With Manu	3000 PSI	DLTFRPSKT3071	-3, -4, -5, -6, -8, -10, -12 (Std 3000psi), -14 (4000psi)		STD
With Manu	3000 PSI	DLTFRPSKT3072	-3, -4, -6, -8, & -12		STD
With Manu	3000 PSI	DLTFRPSKT3073	-5, -6, -8, & -10		STD
With Manu	3000 PSI	DLTFRPSKT3074	-4, -5, & -8		STD
With Manu	3000 PSI	DLTFRPSKT3075	-5		STD
With Manu	3000 PSI	DLTFRPSKT3076	-3, -4, -6, -8, -10, -12, -16, & -24	DLT40MAPSKT3024 & DLT05MAPM1000	STD
With Manu	3000 PSI	DLTFRPSKT3077	-6, -8, -16, -20, & -24	DLTFRPSKT3034 & DLT40PSKT3000	STD
With Manu	3000 PSI	DLTFRPSKT3078	-4, -6, & -12		STD
With Manu	3000 PSI	DLTFRPSKT3079	-16		STD
With Manu	3000 PSI	DLTFRPSKT3080	-10		STD
With Pneu	3000 PSI	DLTFPPSKT3000	-4, -6, -8, -10, -12, & -16	DLT40MAPSKT3004 & DLT02MAPP1000	STD
With Pneu	3000 PSI	DLTFPPSKT3001	-4	only HA, PU, & DLT02MAPP1000, & no box assy	
With Pneu	3000 PSI	DLTFPPSKT3002	-6	only HA, PU, & DLT02MAPP1000, & no box assy	
With Manu	3000 PSI	DLTFRPSKT3100	-4, -6, -8, -10, -12, -16, -20, & -24	DLTFRPSKT3101 & DLT40PSKT3100	SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3101	-4, -6, -8, -10, & -12		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3102	-4, -6, -8, -10, -12, & -16	DLTFRPSKT3101 & DLT40PSKT3102	SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3103	-4, -6, -8, -10, -12, -16, & -20	DLTFRPSKT3101 & DLT40PSKT3105	SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3104	-4, -6, -8, & -12		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3105	-4, -5, -6, -8, -10, -12, -16, -20, & -24	DLTFRPSKT3106 & DLT40PSKT3100	SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3106	-4, -5, -6, -8, -10, & -12		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3107	-4, -6, & -8		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3108	-3, -4, -5, -6, -8, -10, & -12		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3109			SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3110	-3, -4, -5, & -6		SOFT ANNEAL

## DLT KIT LISTING

PUMP	PSI	TOOL KIT P/N	SIZE'S	REMARKS	STD
With Manu	3000 PSI	DLTFRPSKT3111	-3, -4, -5, -6, -8, & -10		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3112	-3, -4, -6, & -8		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3113	-4, -5, -6, -8, -10, & -16		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3114	-3, -6, & -8		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3115	-4, -6, -8, & -10		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3116	-4, & -6		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3117	-8, -10, & -12		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3118	-4, -5, & -6		SOFT ANNEAL
With Manu	3000 PSI	DLTFRPSKT3119	-6, -8, & -16	initial request with -04, Prjct Rqst#16116	SOFT ANNEAL
With Manu	3000 PSI	DLTFRPMKTS3201	-6MM, & -8MM		METRIC, Soft Anneal
With Manu	3000 PSI	DLTFRPSKT3300	-4, -6, -8, -10, -12, -16, -20, & -24	DLT40MAPSKT3300 & DLT05MAPM1000	Boeing Comm'l
With Manu	3000 PSI	DLTFRPSKT3309	-3, -4, -5, -6, -8, -10, -12, -16, -20, & -24	DLT40MAPSKT3305 & DLT05MAPM1000	Boeing Comm'l
With Manu	3000 PSI	DLTFRPSKT3320	-4, -5, -6, -8, -10, -12, & -16	DLT40MAPSKT3303 & DLT05MAPM1000	Boeing Comm'l
With Manu	3000 PSI	DLTFRPSKT3379	-16		Boeing Comm'l
With Manu	4000 PSI/D	DLTFRPSKT4000	-6, -8, -10, -12, -14, -116, -120, & -24	DLTFRPSKT4001, DLT40PSKT4000 & DLT55PSKT4000	
With Manu	4000 PSI/D	DLTFRPSKT4001	-6, -8, -10, -12, & -14		
With Manu	4000 PSI/D	DLTFRPSKT4002	-4, -6, -8, -10, & -12		
With Manu	4000 PSI/D	DLTFRPSKT4003	-4, -5, -6, -8, -10, & -12		
With Manu	4000 PSI/D	DLTFRPSKT4004	-4, -5, -6, -8, -10, -12, -116, -20(STD), & -24	DLTFRPSKT4003 & DLT40PSKT4006	
With Manu	4000 PSI/D	DLTFRPSKT4005	-4, -5, -6, -8, -10, -12, -116, -120, & -24	DLTFRPSKT4003, DLT40PSKT4000 & DLT55PSKT4000	
With Manu	4000 PSI/D	DLTFRPSKT4006	-5, -6, -8, -10, & -12		
With Manu	4000 PSI/D	DLTFRPSKT4007	-4, -5, -6, & -8 (STD); -6(DNR)		
With Manu	4000 PSI/D	DLTFRPSKT4008	-4, -6, -8, -10, & -12 (DNR) ;	DLTFRPSKTS4009 & DLT40MAPSKT3018	
With Manu	4000 PSI/D	DLTFRPSKT4008	-4, -5, -6, -8, -10, -16, -20, & -24 (STD)		
With Manu	4000 PSI/D	DLTFRPSKT4009	OBSOLETE		
With Manu	4000 PSI/D	DLTFRPSKT4010	-116, -20, & -24 (STD)	DLT40PSKT4006	
With Manu	4000 PSI/D	DLTFRPSKT4010	-4, -6, -8, -10, -12, & -14	DLTFRPSKT4011	
With Manu	4000 PSI/D	DLTFRPSKT4011	-4, -6, -8, -10, -12, & -14		
With Manu	4000 PSI/D	DLTFRPSKT4012	-4, -6, -8, -10, -12, -116, -120 & -24	DLTFRPSKT4002 & DLT40PSKT4000 & DLT55PSKT4000	
With Manu	4000 PSI/D	DLTFRPSKT4013	-4, -5, -6, -8, -10, -12, & -14		
With Manu	4000 PSI/D	DLTFRPSKT4014	-4, -5, -6, -8, -10, -12, -14, -116, -120, & -24	DLTFRPSKT4013 & DLT40PSKT4000 & DLT55PSKT4000	
With Manu	4000 PSI/D	DLTFRPSKTS4000	-6, -8, -10, -12, -14, -116, -120, & -24	DLTFRPSKTS4001 & DLT40PSKTS4000 & DLT55PSKTS4000	
With Manu	4000 PSI/D	DLTFRPSKTS4001	-6, -8, -10, -12, & -14	NO CUTTER ASSY, DEBURRING TOOLS, HEX KEY	
With Manu	4000 PSI/D	DLTFRPSKTS4009	-4, -6, -8, -10, & -12	NO P-UNITS (M -5, -10, -20), XTRA C-WHEEL, HEX KEY	
With Manu	2000 PSI/D	DLTFRPSKT2000	Available		
With Manu	2000 PSI/D	DLTFRPSKT2001	Available		
	3000 PSI	DLTBDRPSKT0000	KIT -4, -6, -8, -10, -12, -16, -20, & -24 &	DLTFRPSKT3001 & DLT40PSKT3000 &	STD FITTING KIT
	3000 PSI	DLTBDRPSKT0000	FTG -4, -6, -8, -10, -12, -16, -20, & -24 cres)	DLTBDRPSKTF301	STD FITTING KIT
	3000 PSI	DLTBDRPSKTF301	FTG -4, -6, -8, -10, -12, -16, -20, & -24 (cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKT0000	KIT -4, -6, -8, -10, & -12 &	DLTFRPSKT3001 &	STD FITTING KIT
	3000 PSI	DLTFRPSKT0000	FTG -4, -6, -8, -10, & -12 (cres)	DLTFRPSKTF301	STD FITTING KIT
	3000 PSI	DLTFRPSKTF301	FTG -4, -6, -8, -10, & -12 (cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF302	FTG -4, -6, -8, -10, -12, & -16 cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF303	FTG -3, -4, -5, -06, -8, -10, -12, -16, -20, & -24 (cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF304	FTG -3, -4, -5, -6, & -8 (cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF305	FTG -4, -6, -8, -10, -12, & -16 cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF306	FTG -4, -6, -8, -10, & -12 (ALUM)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF307	FTG -4, -6, -8, -10, -12 & -16 (ALUM)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF308	FTG -4, -6, -8, -10, -12, -16, -20, & -24(ALUM)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF309	RESERVE for ALUM FTG KIT		STD FITTING KIT
	3000 PSI	DLTFRPSKTF310	RESERVE for Soft Anneal FTG KIT (see section 1.3.1.2)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF311	RESERVE for Soft Anneal FTG KIT (see section 1.3.1.2)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF312	RESERVE for Soft Anneal FTG KIT (see section 1.3.1.2)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF313	RESERVE for Soft Anneal FTG KIT (see section 1.3.1.2)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF314	RESERVE for Soft Anneal FTG KIT (see section 1.3.1.2)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF315	RESERVE for Soft Anneal FTG KIT (see section 1.3.1.2)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF316	RESERVE for Soft Anneal FTG KIT (see section 1.3.1.2)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF317	RESERVE for Soft Anneal FTG KIT (see section 1.3.1.2)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF318	RESERVE for Soft Anneal FTG KIT (see section 1.3.1.2)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF319	RESERVE for Soft Anneal FTG KIT (see section 1.3.1.2)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF320	FTG -4 & -6 (cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF321	FTG -4, -6, -8, & -10 (cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF322	FTG -4, -6, -8, -10, & -12 (cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF323	FTG -4, -6, & -8 (cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF324	FTG -4, -6, -8, -10, -12, & -16 cres) & Ext'd union's		STD FITTING KIT
	3000 PSI	DLTFRPSKTF325	FTG -3, -4, -5, -06, -8, -10, -12, -16, -20, & -24 (cres)		STD FITTING KIT
	3000 PSI	DLTFRPSKTF310	FTG -6, -8, & -16		SOFT ANNEAL FITTING KIT
	3000 PSI	DLTFRPSKTF312	FTG -4, -6, -8, -10, -12, & -16		SOFT ANNEAL FITTING KIT
	4000 PSI/D	DLTBDRPSKT4000	KIT -4, -6, -8, -10, -12, -116, -20 & -24 &	DLTFRPSKT4002 & DLT40PSKT4006 &	FITTING KIT
	4000 PSI/D	DLTBDRPSKT4000	FTG -4, -6, -8, -10, -12, -16, -20, & -24	DLTFRPSKTF4000	FITTING KIT
	4000 PSI/D	DLTBDRPSKT4000	FTG -4, -6, -8, -10, -12, -16, -20, & -24	DMD'S (Need to double check BOM size's 20 & 24)	FITTING KIT
	4000 PSI/D	DLTFRPSKTF4001	FTG -4, -6, -8, -10, & -12	DMD'S	FITTING KIT
	4000 PSI/D	DLTFRPSKTF4002	FTG -4, -6, -8, -10, -12, & -16	DMD'S	FITTING KIT